

ELECTRIC FRAME


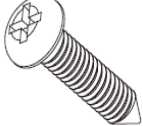







PRATO 05-2T
Installation guide

Specification



Stage columns	2
Load capacity	60 kg
Max. speed	30 mm/s
Input voltage	AC 100-240 V
Adjustable height	720-1200 mm
Duty cycle	10% (2 minutes ON / 18 minutes OFF)
Working temperature	0-40 st. C
Certification	CE

 Accessories list

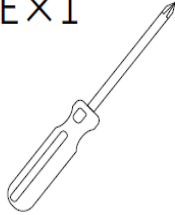

A×12  M6×14	B×6  ST5×15	C×1  M6×10	D×1 	E×1 	F×2 
---	---	--	--	---	---

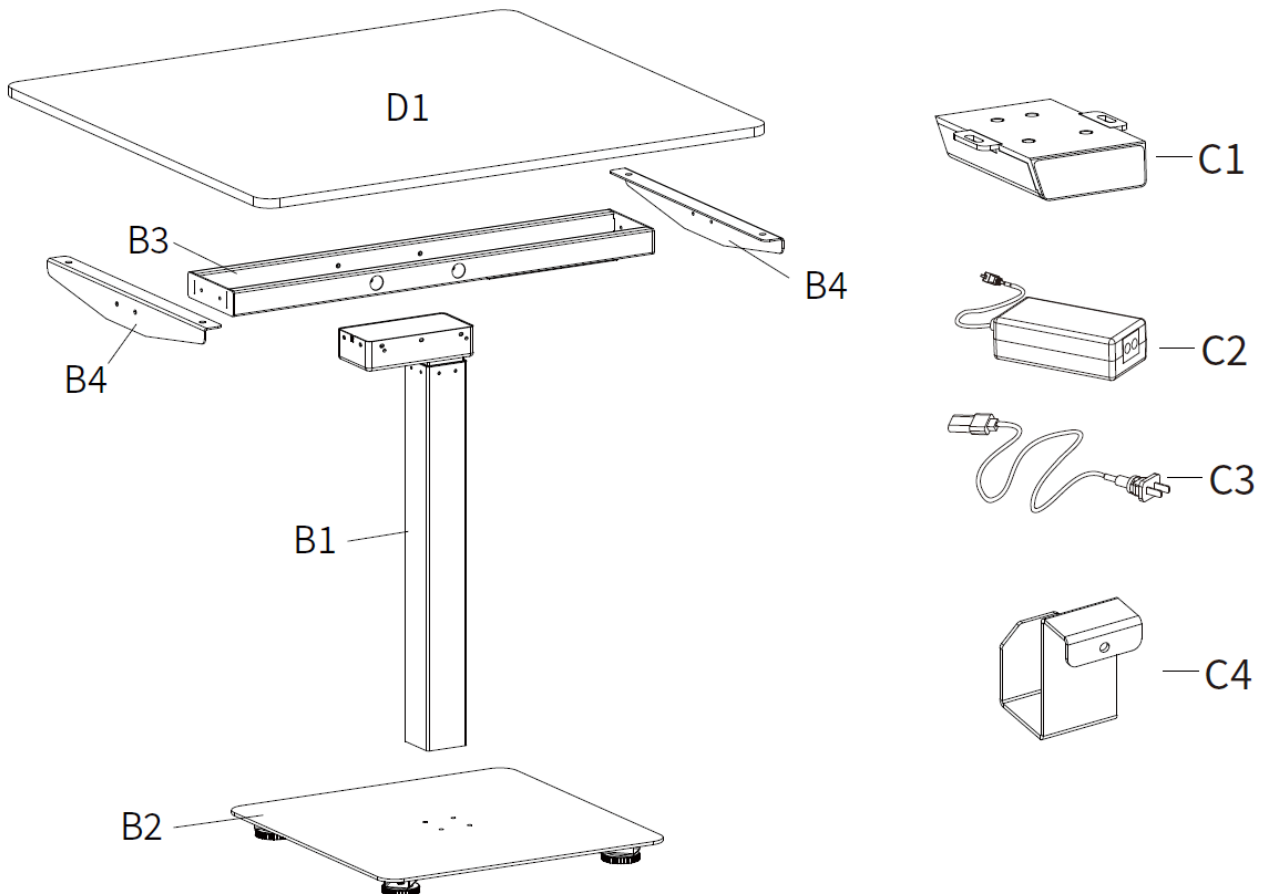



Step 1

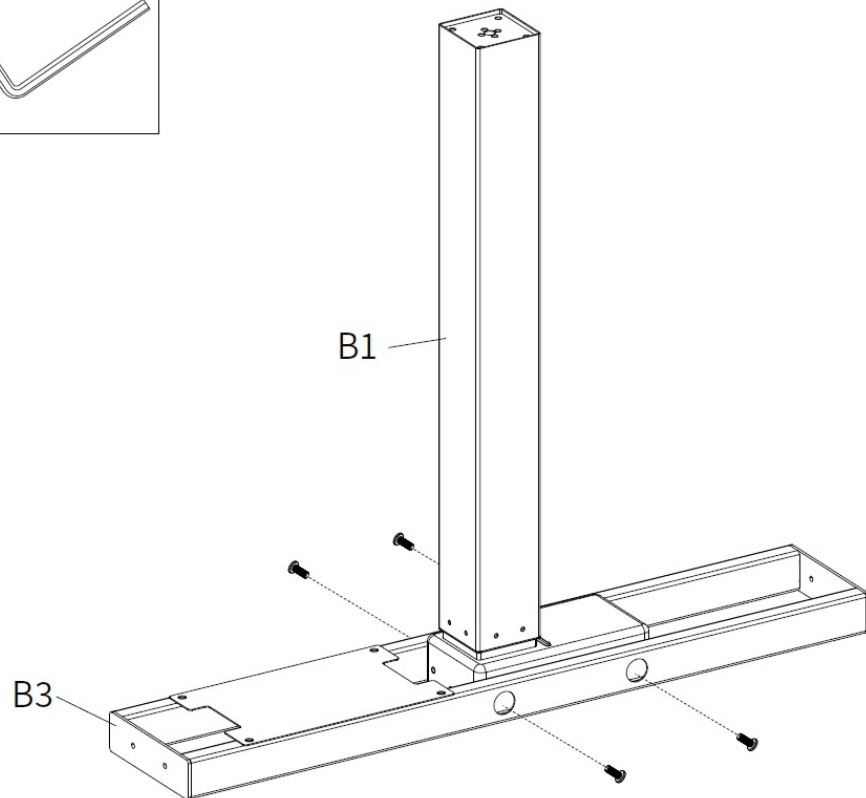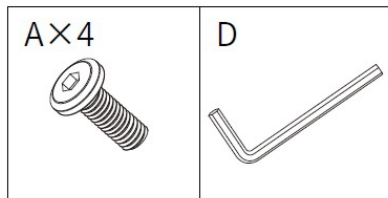



Step 2

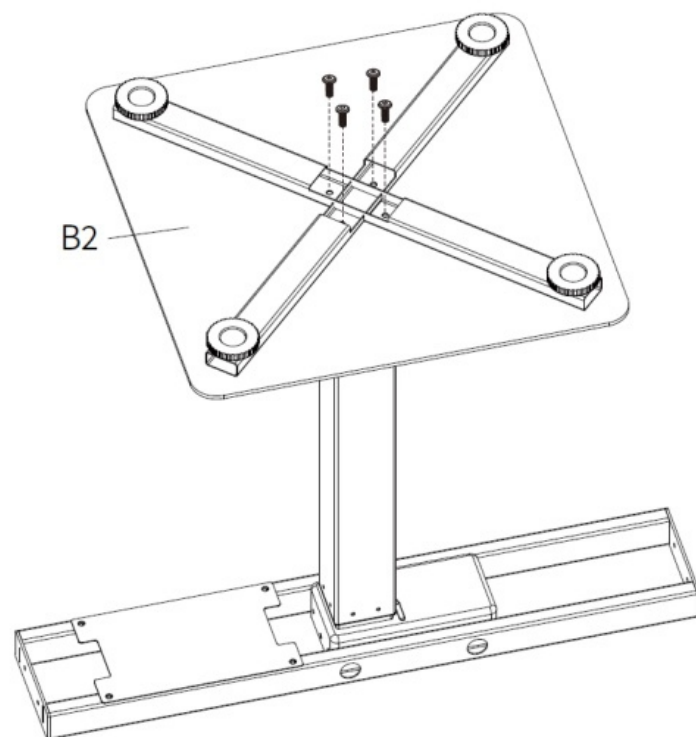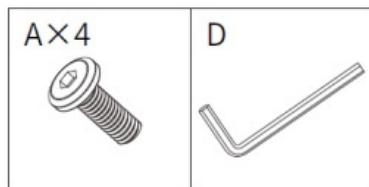





Step 3

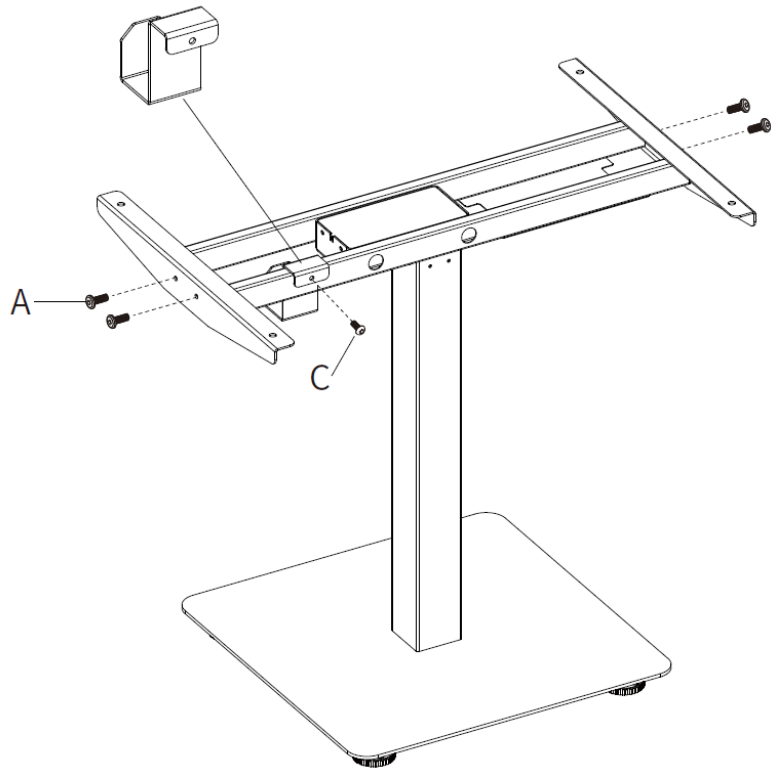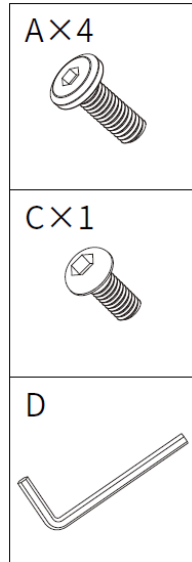

Step 4

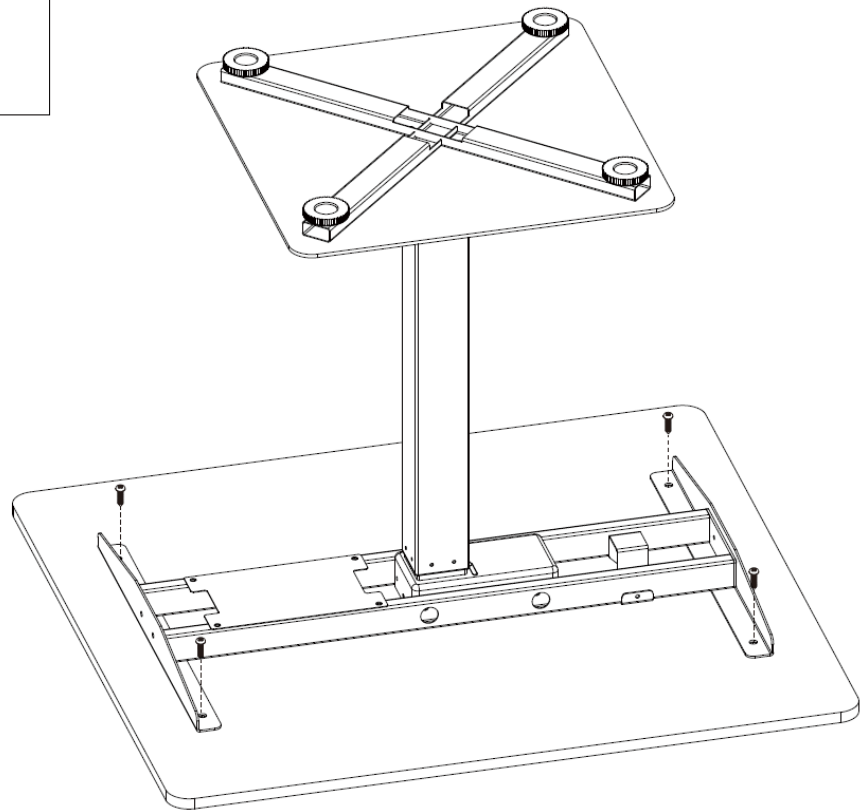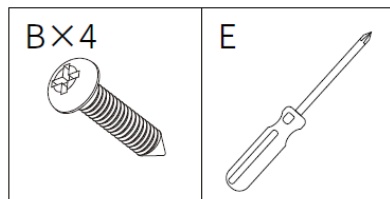

Step 5

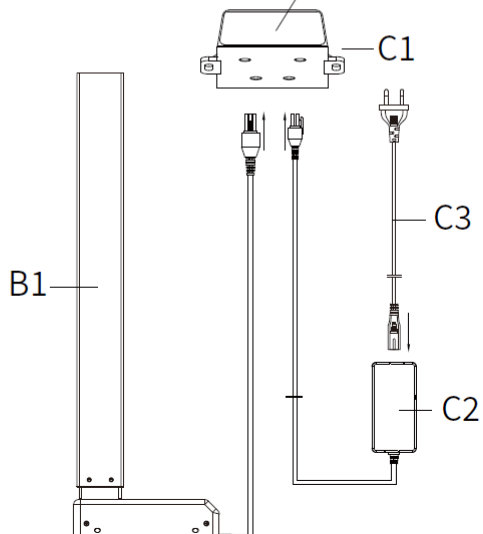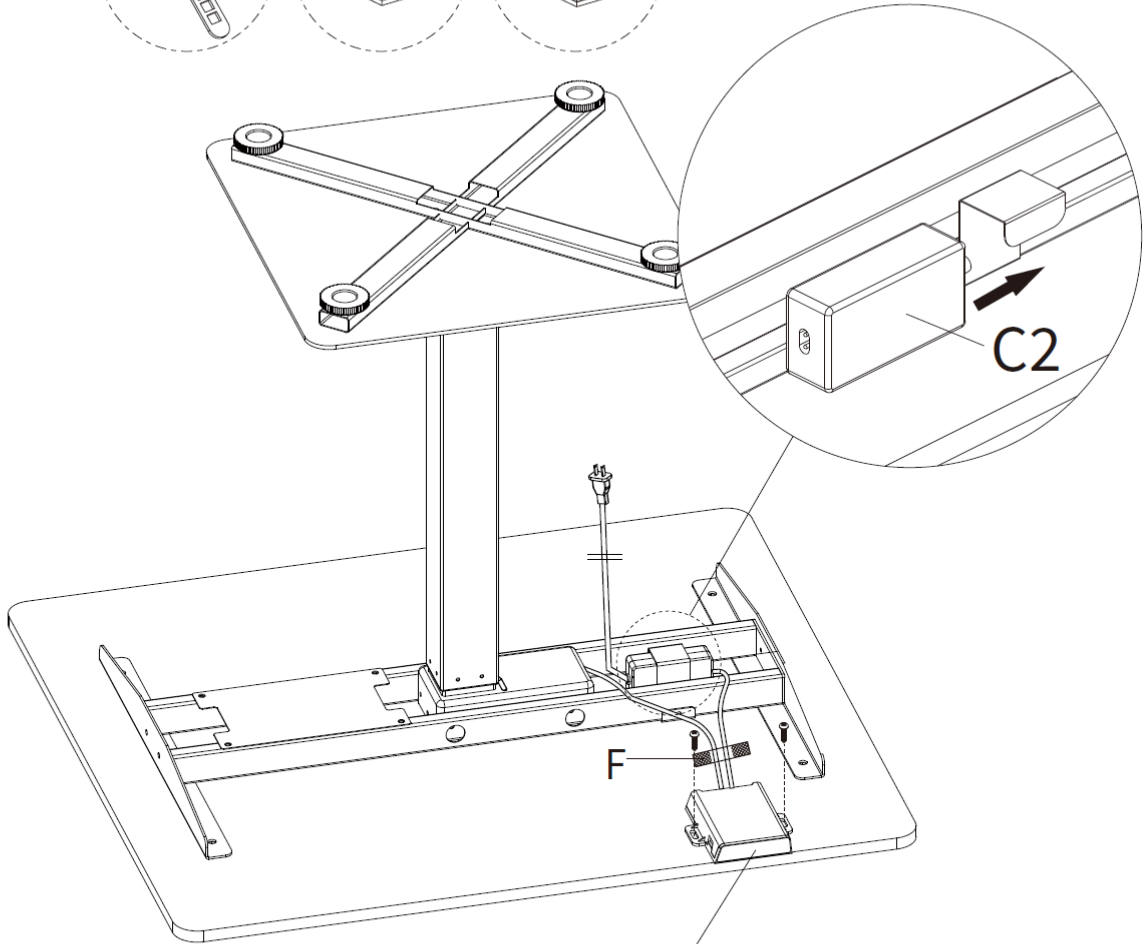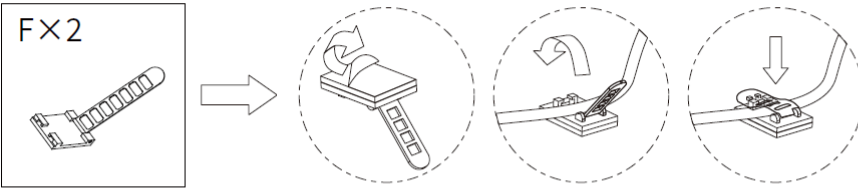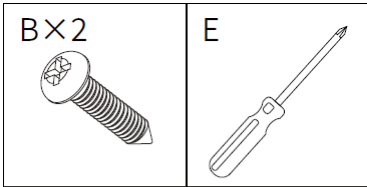

Controller instruction



- 1. Height adjustable function**
Press the "▲" or "▼" button to adjust the height. The LED display shows the current height.
- 2. Childproof lock**
Press and hold the "▲" and "▼" buttons for more than 5 seconds at the same time to set the child lock. After the setting is successful, the LED will display "Loc". At this time, all buttons operations are invalid. You can press the "▲" and "▼" buttons at the same time for 5 seconds to cancel the lock state, when the hand control display changes from "Loc" to normal digital display, it means the system has been unlocked.
- 3. Reset function**
When the table is at the lowest position, press and hold „▼” for more than 5 seconds until the display show „rst”. After the reset is completed, the display will show the lowest height number.
- 4. Anti-collision system**
The frame is equipped with an anti-collision system. Upon encountering an obstacle, the frame will stop and start moving in the opposite direction.
- 5. Over heating protection**
Display shows "hot", indicating the desk is running frequently, and the motor is over heating, so the system stop operation at once for 18 minutes rest in order to avoid the damage of motor.

Rozwiązywanie problemów

Pressing the up or down button has no response	Check whether the wire connection is normal Try to reset the operation
Slow rise speed	Check whether it is overloaded
Can only go down, not up	Check whether it is overloaded Try to reset the operation
Bracket sliding down	Check whether it is overloaded
Often automatically enters the reset state	Check whether it is overloaded
Motor work timeout	Use it after 18 minutes of suspension

PL Please read the manual carefully before assembly and use. If you have any doubts or queries, please contact your local distributor.

CAUTION: using the frame with products heavier than the recommended weight may cause loss of stability leading to injury.

Please follow the instructions carefully when assembling. Incorrect installation may result in damage or serious injury.

Make sure that the worktop surface can safely support the weight of all equipment and other components.

Use only the screws provided with the frame and make sure they are not overtightened.

The product contains small parts that are dangerous if swallowed. Keep the product away from children.

The product is intended for indoor use only. Using the product outdoors may result in product loss and injury.

IMPORTANT: Before assembling and installing, please make sure the product is complete. If any parts are damaged or missing, please contact your local distributor for replacement.

Product should be regularly checked for safety in use (at least every 3 months).

